

- PLACARD BATTEN
- MAIN CURTAIN
- DRAW CURTAIN
- NO.1 BODER LIGHT BATTEN
- NO.1 SUSPENSION LIGHT BATTEN
- NO.1 FLY SET BATTEN
- NO.2 FLY SET BATTEN
- NO.3 FLY SET BATTEN
- NO.4 FLY SET BATTEN
- DRAW CURTAIN
- NO.2 BODER LIGHT BATTEN
- NO.2 SUSPENSION LIGHT BATTEN
- PROJECTION SCREEN
- NO.5 FLY SET BATTEN
- DRAW CURTAIN
- NO.3 BODER LIGHT BATTEN
- NO.3 SUSPENSION LIGHT BATTEN
- UPPERHORIZONT LIGHT BATTEN
- NO.6 FLY SET BATTEN
- NO.7 FLY SET BATTEN
- NO.8 FLY SET BATTEN
- HORIZONT CURTAIN

MAIN CURTAIN 속도 0-50M/MIN

FLY SET BATTEN 속도 0-50M/MIN

